

Gemini System, Installation and Use Instructions



* IMPORTANT SAFETY INSTRUCTIONS *

"For Commercial Use Only"

The instructions shall include the markings, or equivalent as specified in "Marking Requirements" .

When using an electrical furnishing, basic precautions should always be followed, including the following:

- 1. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- 2. Keep the cord away from heated surfaces.
- 3. Do not use outdoors.

CONSTRUCTION DETAILS:

All wire nuts, connectors, conduit & fittings, are UL Certified, CSA Certified, and suitable for the gauge and number of conductors.

Notes on Installation

- Table systems: The table should be set in the intended place and leveler glides adjusted so that the table is level and all four glides are contacting the floor.
- Installer Qualifications: For installation and maintenance of units, an authorized representative of the manufacturer required for this project.

Maximum load for each load-bearing surface = 1000 lbs (per table side) Maximum load for each shelf surface = 150 lbs


Table assembly instructions:

Figure "A": Align the table frames with the uprights as shown. Choose the appropriate height settings for installation.

Figure "B": Use the 3/8"-16 bolts provided for each side of table frame as shown. Tighten each bolt to a minimum of 20 ft-lbs of torque.

Figure "C": Install each side cover panel into place starting with the bottom first. Be sure to align all of the tabs at the same time, then while placing pressure on the panel slide each individual panel downward into position.

Final step is to secure the top plate Figure "D" with four screws as provided. This assures that the side panels are secured into place.

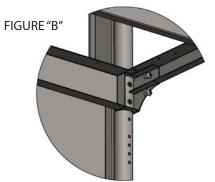

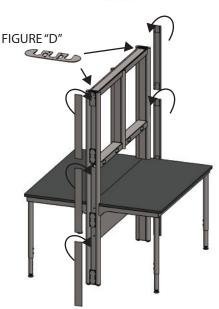


FIGURE "C"

SAVE THESE INSTRUCTIONS





Gemini System, Installation and Use Instructions

* IMPORTANT SAFETY INSTRUCTIONS *

"Read all instructions before using (this functioning). DANGER - To reduce the risk of electric shock:

- 1. Always unplug this furnishing from the electrical outlet before cleaning. WARNING To reduce the risk of burns, fire, electric shock, or injury to persons:
- 1. Unplug from outlet before putting on or taking off parts.
- 2. Close Supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- 3. Use this furnishing only for its intended uses described in these instructions. Do not use attachments not recommended by the manufacture.
- 4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- 5. Keep cord away from heated surfaces.
- 6. Never operate the furnishing with the air openings blocked. Keep th air openings free of lint, hair, and the like.
- 7. Never drop or insert any object into any opening.
- 8. Do not use outdoors.
- 9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. To disconnect, turn all controls to the off position, then remove plug from outlet.
- 11. For chairs and similar furnishings with movable parts such as foot supports the following statement:
- "WARNING: Risk or injury keep children away from extended foot support (or other similar parts)."
- 12. For grounded products the following statement:
- "WARNING: Risk of electric shock Connect this furnishing to a properly grounded outlet only. See grounding instructions."
- 13. For loading always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.
- 14. If the furnishing is not intended to support video monitors such as televisions or computer monitors, one of the following statements:
- "WARNING: Risk of injury to persons do not place video equipment such as televisions or computer monitors on shelves or surfaces."
- "WARNING: Risk of injury to persons do not use this furnishing to support video equipment such as televisions or computer monitors."
- 15. Each surface intended to support a load shall have a corresponding statement in the use Instructions specifying the maximum intended load for the surface in pounds.

"To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way."

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see figure 77.1) Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. This product may also use a 'twist-lock' style plug, not shown.

SAVE THESE INSTRUCTIONS

