


UTILITY TABLE

Installation and Use Instructions

FIGURE "1"

A

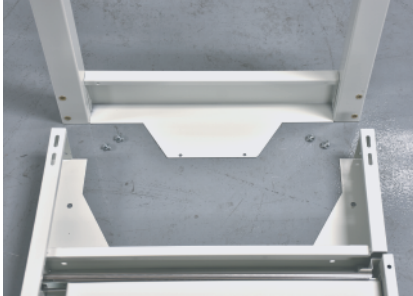

B



* IMPORTANT SAFETY INSTRUCTIONS *

"For Commercial Use Only"

The instructions shall include the markings, or equivalent as specified in "Marking Requirements" .

Where applicable:

When using an electrical furnishing, basic precautions should always be followed, including the following:

1. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
2. Keep the cord away from heated surfaces.
3. Do not use outdoors.

Maximum load for table surface = 1000 lbs

Utility Table Parts List:

1. Upright 'H' Legs x2, *Includes levelers*
2. Apron Frame (drawer optional)
3. Bolts x8 and Washers x8

FIGURE "2"

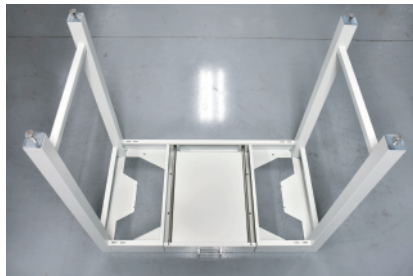


Table assembly instructions:

Figure "1"

A. With Apron Frame upside-down - align the captive nuts in 'H' Legs with the bolt-holes in the apron. Repeat for the opposite side.

B. Insert 1 bolt with 1 washer and thread into the openings x4 per 'H' Leg. Tighten the each bolt using 7/16" socket to 15-20 ft-lbs of torque.

FIGURE "3"



Figure "2":

Double-check that the legs are properly tightened and square to the apron.

Figure "3":

Return the table to upright position and adjust the levelers as required. Add the optional lower leg boots when required.

SAVE THESE INSTRUCTIONS

