

USB and USBC Ports

Total Capacity 1,000 lbs

Powder Coated Steel
Frame

Electrical Outlets at
Surface

Storage Cubby

MOBILE WORK BENCH

OVERVIEW

The Mobile Work Bench is a rugged durable option for a classroom work bench. Complete with NEMA 5-15 and UL approved Electrical, USB and USBC at the surface for easy access to power for all your devices. The power strip includes a standard 3 prong, 6' supply cord to supply power from the wall/floor. A convenient storage cubby available at the surface for additional storage. The vertical frame at the back accepts multiple accessories like peg boards, shelving, tool holders and even an overhead light bar. With a total weight capacity of 1,000lbs this bench is ready for anything you encounter in your classroom. Benches are 84"H x 30" D with 48", 60" and 72" widths available.



* Accessories not included

MATERIALS

The majority of the bench is 14-gauge cold rolled steel, the rails and the frame are 12-gauge cold rolled steel, with the nonstructural pieces being 16 and 18-gauge. Each piece is powder coated for maximum durability. The bench will be shipped knocked down with minimal assembly required on site. The electrical bar is NEMA-5-15 and UL-E89439 approved with simplex receptacles a toggle switch and one each USB and USBC ports.


ACCESSORIES

Peg Boards, Utility Hanger, Monitor arm, Shelves, Wire Hook, Plastic Basket, Tool Holder, Overhead Light, Monitor Arm, Wire Basket, Markerboard, Privacy Panels, and a Shelf Cubby.

** Available colors:

Ink Black, Summer Green, Engine Red, Royal Purple, Sky Blue, Tiger Orange, Petal White, Bankers Gray, Model Gray





Numeric Key:

P - Phenolic

E - Epoxy

L - Laminate

BLKL - Black (Phenolic, Epoxy, Laminate)




ASHL - Ash (Laminate)

GRPL - Storm (Laminate)

FWLL - Formal Walnut (Laminate)

NTAL - Natural Ash (Laminate)


BKOM - Bianco Kos (Laminate)

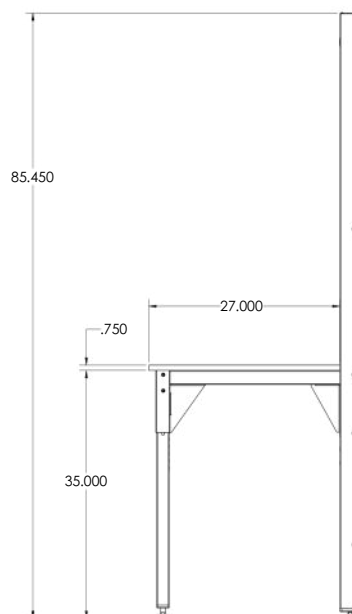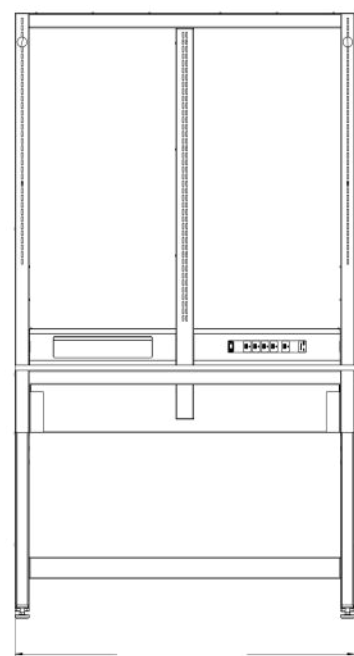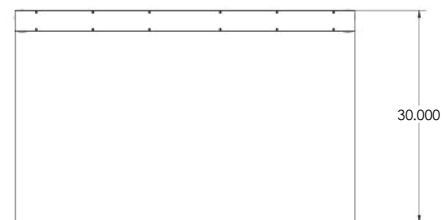

Scan for more info

Part Number	Width	Depth	Surface
MWB-4830-PBLKL	48	30	PHENOLIC
MWB-4830-EBLKL	48	30	EPOXY
MWB-4830-LBLKL	48	30	LAMINATE
MWB-6030-PBLKL	60	30	PHENOLIC
MWB-6030-EBLKL	60	30	EPOXY
MWB-6030-LBLKL	60	30	LAMINATE
MWB-7230-PBLKL	72	30	PHENOLIC
MWB-7230-EBLKL	72	30	EPOXY
MWB-7230-LBLKL	72	30	LAMINATE

REV-002



Black



Ash




Storm



Formal Walnut



Natural Ash

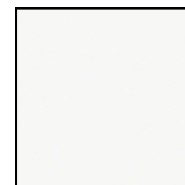

Bianco Kos

***Additional Laminates Available Upon Request.**