

MOBILE STORAGE CART

4" Swivel Locking Casters

Total Capacity 1,000 lbs

1" Diameter push handle

2" Rear Cord Grommet

Interlocking Drawer Slides

OVERVIEW

The Mobile Storage Cart is a must have for your classroom. The rigid frame, solid easy grip push handle and 4" swivel casters make this the perfect cart for all your supplies and teaching materials. A 2" Diameter cord grommet allows for easy plug in of any equipment on the cart for demonstrations or equipment. Cart storage includes 4 drawers with interlocking drawer slides, 3 open shelves and 1 door with sound dampening material. With a total weight capacity of 1,000lbs this bench is ready for anything you can throw at it. Carts are 37"H x 25" D x 54"W and come with either a Black Phenolic Surface or Butcher Block Surface.



MATERIALS

The structure of the cart is constructed of welded and formed 18-gauge cold rolled steel. The drawers and doors are 20-gauge cold rolled steel that encompass sound dampening material. Each piece is powder coated for maximum durability. The push handle is 1" diameter steel for easy grip maneuvering. Our cart will ship fully assembled. Weight capacity of the cart is 1,000lbs with a total cart weight of 310lbs depending on surface material selected. Surfaces can be either 1" Black Phenolic Resin, or 1" Butcher Block hardwood.



** Available colors:

Ink Black, Summer Green, Engine Red, Royal Purple, Sky Blue, Tiger Orange, Petal White, Bankers Gray, Model Gray

Mobile Storage Cart Width Top Material

MSC-375425-PBLK

Height Depth

Numeric Key:

PBLK - Black Phenolic

BBWT - Butcher Block Wood Top




Part Number	Width	Depth	Surface
MSC-375425-BBWT	54	25	BUTCHER BLOCK
MSC-375425-PBLK	54	25	PHENOLIC



Black



Butcher Block

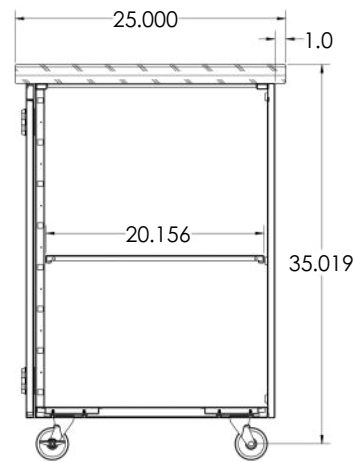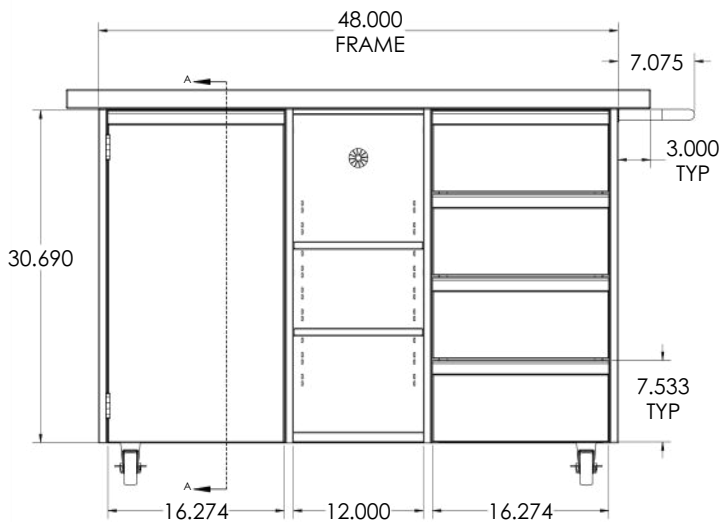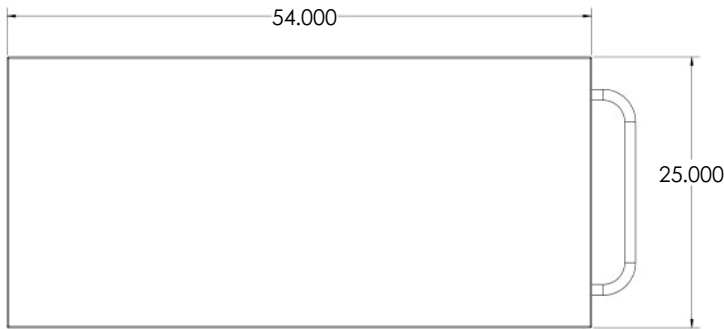

SECTION A-A



Scan for more info