

Multiple Surface Options

1, 2, or 3 Door Units

**Powder Coated Steel
Frame**

Padlock Hasps

Spring Hinges

MODULAR LOCKER BLOCK

OVERVIEW

The modular base lockers are a reliable, durable option for any classroom. Lockers can be purchased individual or as part of a block with a 1.5" thick surface. Surfaces for locker blocks come in either butcher block or laminate material. The 4 locker block surface is 54" x 64" and the 6 locker block surface is 72" x 64". Air Master Systems is also offering a 4"H base for the lockers should you require a toe kick. Individual lockers are 31" High x 18"Wide x 21"Deep. They are available with 1, 2 or 3 doors with a padlock locking hasp for added security. Lockers are shipped fully assembled. Note: All the lockers in a block will have the same door configuration they cannot be mixed and matched.



***MBL-4B-3-LBKOM**

MATERIALS

Locker bodies are made from 20 gauge cold rolled steel with 18 gauge cold rolled steel doors. Padlock Hasps are 14 gauge cold rolled steel and all doors have spring hinges. Locker bodies are fully welded with the doors being riveted to the welded locker body. Surfaces are 1.5" Thick with either butcher block or laminate available as standards.



** Available colors:

Ink Black, Summer Green, Engine Red, Royal Purple, Sky Blue, Tiger Orange, Petal White, Bankers Gray, Model Gray

Modular Base Locker # Of Doors Color

MBL-4B-3-LBKOM

Of Blocks Material

Key:

Surfaces:

B - Butcher Block

L - Laminate

Materials:

BBWT - Butcher Block Wood Top (1.5" Thick)

BLKL - Black (Laminate)

ASHL - Ash (Laminate)

GRPL - Storm (Laminate)

FWLL - Formal Walnut (Laminate)

NTAL - Natural Ash (Laminate)

BKOM - Bianco Kos (Laminate)

Part Number	# of Doors	Number of Lockers	Surface Material
MBL-4B-1-LBLKL	1	4	LAMINATE
MBL-4B-2-LBLKL	2	4	LAMINATE
MBL-4B-3-LBLKL	3	4	LAMINATE
MBL-4B-1-BBWT	1	4	BUTCHER BLOCK
MBL-4B-2-BBWT	2	4	BUTCHER BLOCK
MBL-4B-3-BBWT	3	4	BUTCHER BLOCK
MBL-6B-1-LBLKL	1	6	LAMINATE
MBL-6B-2-LBLKL	2	6	LAMINATE
MBL-6B-3-LBLKL	3	6	LAMINATE
MBL-6B-1-BBWT	1	6	BUTCHER BLOCK
MBL-6B-2-BBWT	2	6	BUTCHER BLOCK
MBL-6B-3-BBWT	3	6	BUTCHER BLOCK


REV-001



Black



Ash

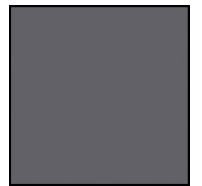


Storm



Formal Walnut




Natural Ash

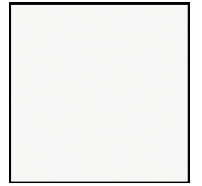


Bianco Kos


***Additional Laminates Available Upon Request.**

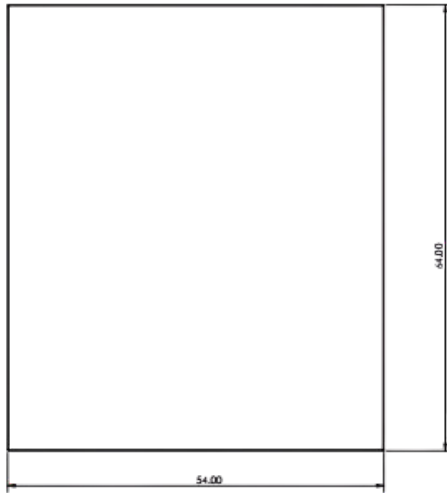

TOP VIEW

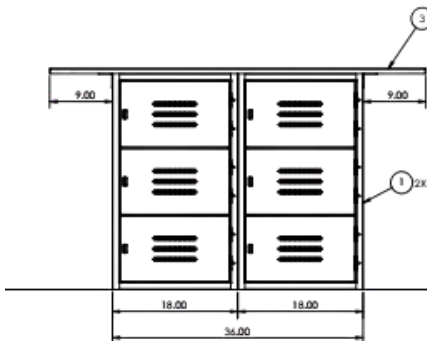

FRONT/REAR VIEW

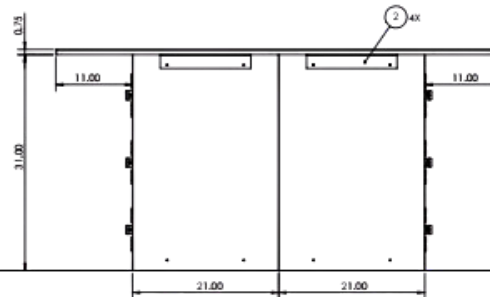

END VIEW



Scan for more info