


The Eliminator Paint (Spray) Booth

The AMS Paint Booth is fabricated of 18-gauge steel with a corrosion resistant, powder coat baked epoxy finish. The upper booth enclosure includes a standard vapor-proof light as well as two filters set in an easy-to-change flange bracket system. The globed interior light is mounted with bulb included.

ELIMINATOR PAINT (SPRAY) BOOTH

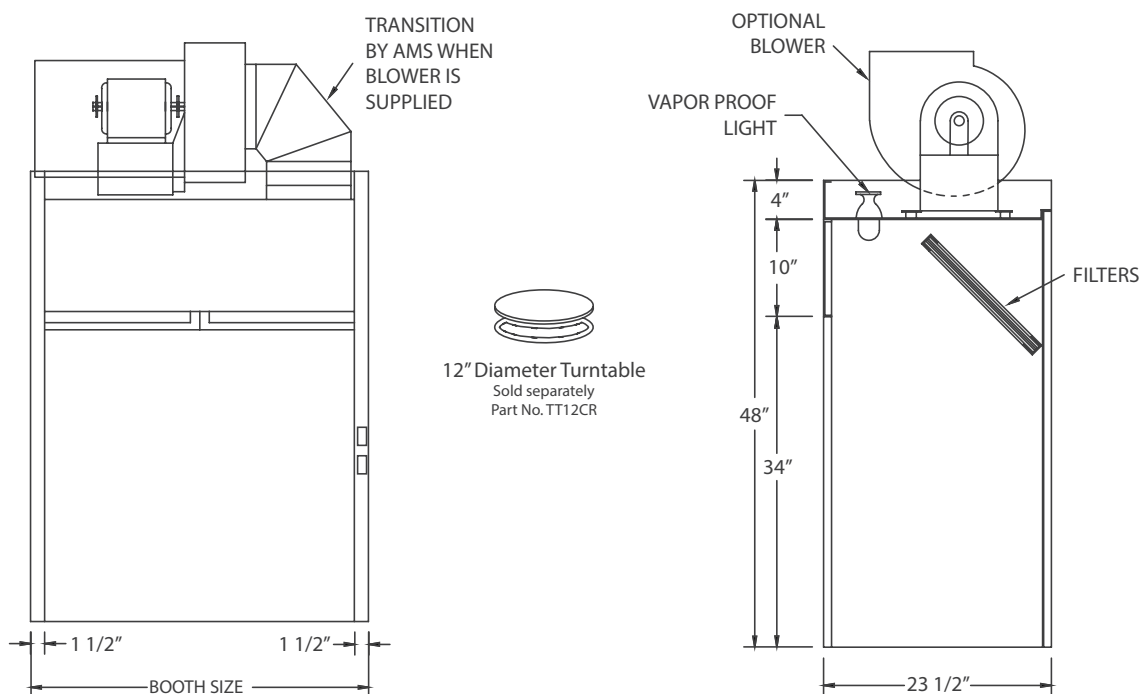

Paint (Spray) Booth

Part Number	Description	CFM @ 100 FPM
AMS-24-PB	24" Paint (Spray) Booth	472
AMS-30-PB	30" Paint (Spray) Booth	613
AMS-36-PB	36" Paint (Spray) Booth	755
AMS-48-PB	48" Paint (Spray) Booth	1040
AMS-60-PB	60" Paint (Spray) Booth	1322

Explosion-Proof Options

Part Number	Description	CFM @ 100 FPM
AMS-24-XPB	24" Booth w/X-P Light	472
AMS-30-XPB	30" Booth w/X-P Light	613
AMS-36-XPB	36" Booth w/X-P Light	755
AMS-48-XPB	48" Booth w/X-P Light	1040
AMS-60-XPB	60" Booth w/X-P Light	1322

Paint (Spray) Booth w/ Blower

Part Number	Description	CFM @ 100 FPM
AMS-24-PBW	24" Booth and Blower	472
AMS-30-PBW	30" Booth and Blower	613
AMS-36-PBW	36" Booth and Blower	755
AMS-48-PBW	48" Booth and Blower	1040
AMS-60-PBW	60" Booth and Blower	1322


Paint (Spray) Booth w/ Explosion-Proof Light/Blower

Part Number	Description	CFM @ 100 FPM
AMS-24-XPBW	24" Booth w/X-P Light and Blower	472
AMS-30-XPBW	30" Booth w/X-P Light and Blower	613
AMS-36-XPBW	36" Booth w/X-P Light and Blower	755
AMS-48-XPBW	48" Booth w/X-P Light and Blower	1040
AMS-60-XPBW	60" Booth w/X-P Light and Blower	1322

The Eliminator Paint (Spray) Booth

The optional blower motor operates at an RPM designed to provide 100 LFM and approximately 3/4" of static pressure. If the blower is ordered, it will be mounted on the booth and wired to the common junction box with the light. The transition piece from the booth to blower will be provided and connected. Both the light and the blower can be pre-wired to switches in the front post area of the booth when required.

ELIMINATOR PAINT (SPRAY) BOOTH

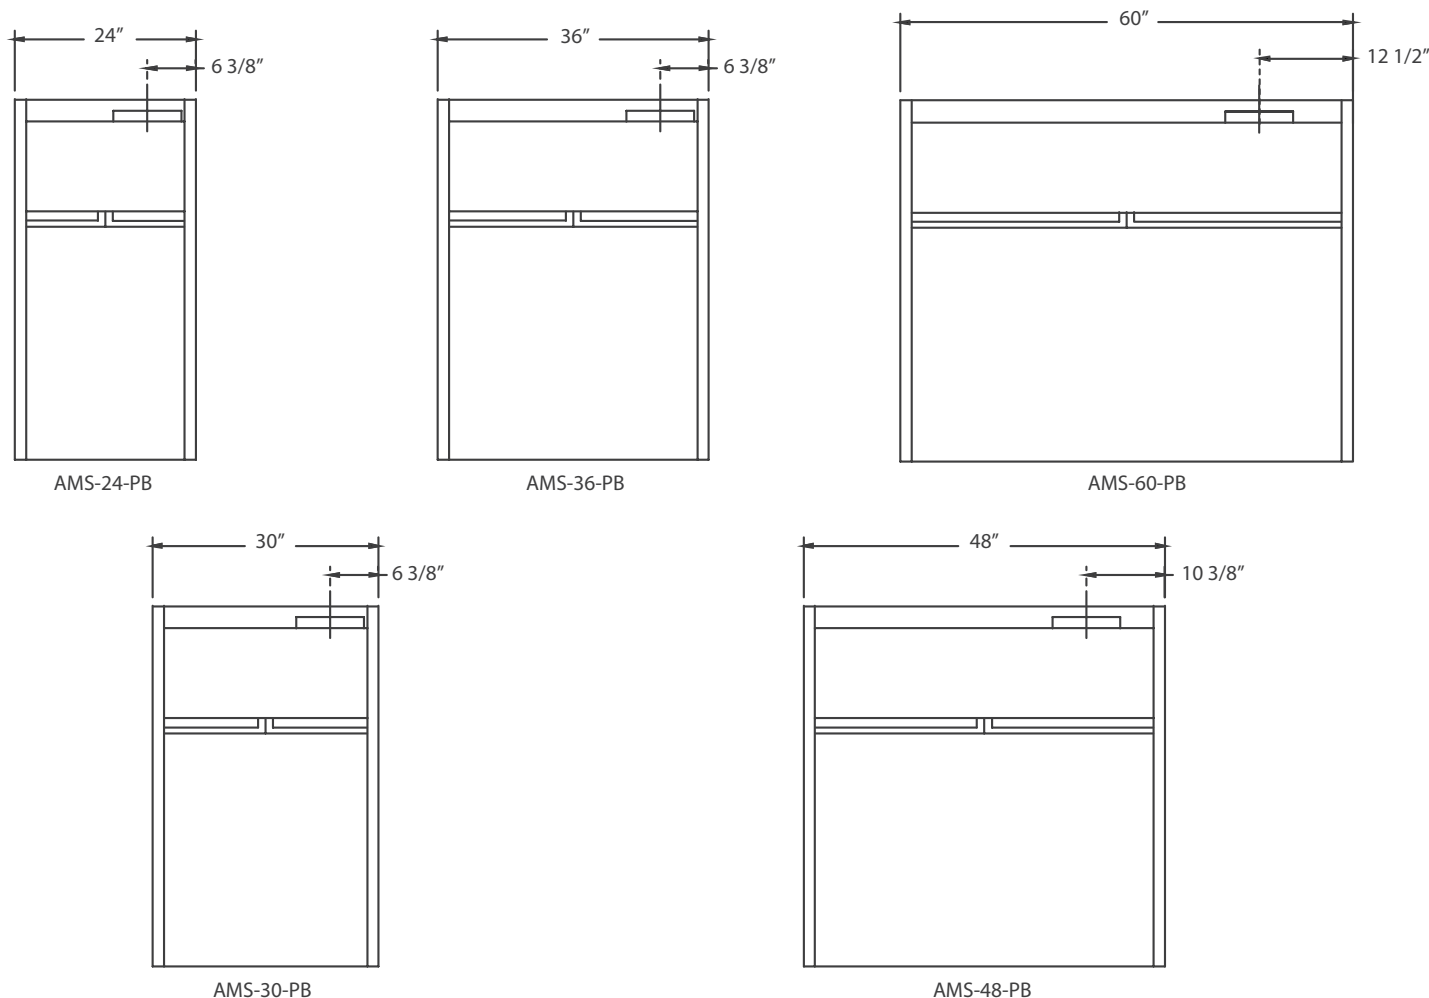

NOTE: Explosion-proof (X-P) switches must mount on the exterior of booth or be shipped loose for remote operation.

Accessories

ITEM	AMS PT#	PAGE #	ITEM	AMS PT#	PAGE #
Light Switch	LTSW-Micro	35	Galvanized Top		CALL
Blower Switch	BLSW-Micro	35	Pre-Wire Service	PREWIRE	
Stainless Steel Top		39			